


To assemble this product correctly, carefully read these instructions before assembly. Keep these instructions nearby so that you can immediately refer to them when necessary.

Caution when assembling the unit

- Make sure to enlist the help of at least one other person.
- Lift the piano carefully—all the while keeping it level.
- Prepare an area in which you can perform the assembly safely.
- If necessary, spread out a blanket or similar material to prevent the stand or floor from being scratched during assembly.
- Place the unit at a location that is level and sure to remain stable. The unit must never be placed on top of deep-pile carpet. Otherwise, you risk causing damage to the pedals due to instability and unnecessary movement.
- Make sure to keep screws and any other small parts in a safe location that is out of the reach of small children, so such small parts won't accidentally get swallowed.
- Be careful not to pinch your hands or drop this unit on your foot.
- All screws should be tightened provisionally first, then tightened later. To tighten a screw provisionally, screw it in until about half of its length is no longer visible. For a successful assembly, compensate for any warping while you tighten the screws.
- Do not use a power tool (e.g., an electric screwdriver) to assemble the stand. You risk damaging or stripping the screws.
- Be careful not to pinch the pedal cord during assembly.
- Do not place the piano unit directly on the floor. Doing so will damage the bottom panel case and the connectors on the bottom of the piano unit.



Check the parts

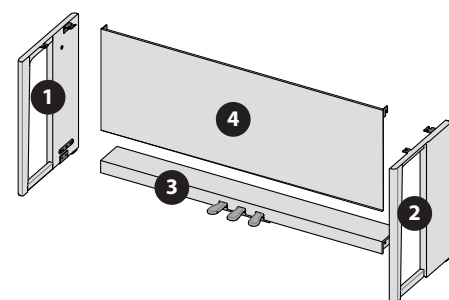


1	Side board (left)	A	Screw (M5 x 40 mm) x 4
2	Side board (right)	B	Screw (M5 x 20 mm) x 6
3	Pedal board	C	Screw (M4 x 16 mm) x 2
4	Rear board	D	Headphone hook x 1

* The screwdriver required for assembly is not included. Obtain a Phillips screwdriver of the appropriate size for each screw (sizes: No.2).


1. Stand Assembly

1. As shown in the illustration, place the left and right side boards against the pedal board so that their hardware are on the inside, and use screws **A** (2 pcs. each at left and right) to fasten them provisionally.

As seen from below

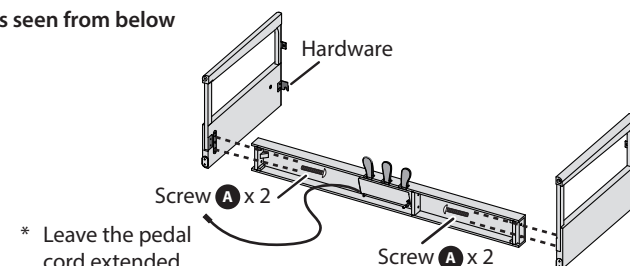


2. With the help of another person, and each person grasping the left and right side board respectively, raise the stand to the upright position.

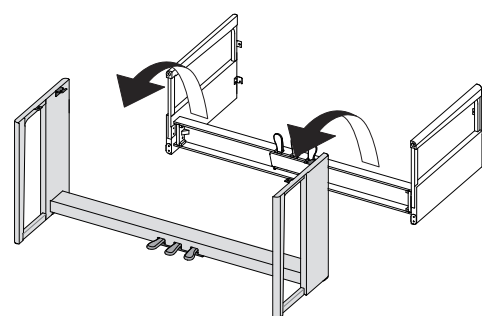


3. Slightly loosen (3 or 4 mm) the screws in the upper part of the side boards (one each at left and right).

4. Insert the rear board from directly above, and engage the hardware with the side board screws that you loosened.

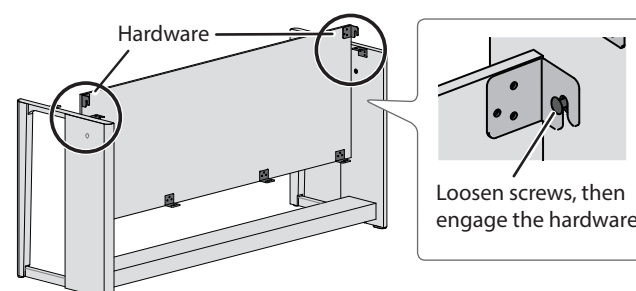


5. Use screws **B** to securely fasten the rear board and pedal board (4 pcs.).

* Tighten the four screws evenly. If they are tightened unevenly, there might be gaps where the rear board and pedal board meet.

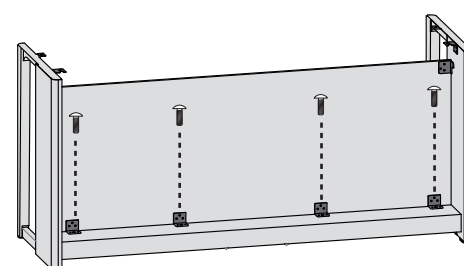

6. With the help of another person, and each person grasping the left and right side board respectively, lay the stand down, and use a screwdriver to firmly tighten screws **A** of step 1 (2 pcs. each at left and right) and the side board screws of step 3 (one each at left and right).

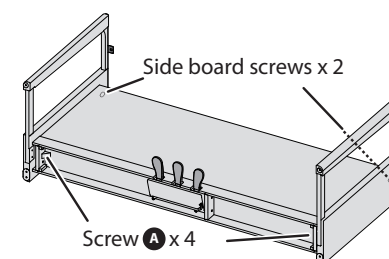


7. With the help of another person, and each person grasping the left and right side board respectively, raise the stand to the upright position.


2. Install the Piano Unit onto the Stand

1. Align the screws on the bottom of the piano unit (one each at left and right) with the hardware of the side boards, and while lifting up the keyboard side of the piano 1–2 cm, engage the screws in the hardware.

* The illustration shows the HP702. The HP704 is shipped from the factory with the music rest installed.

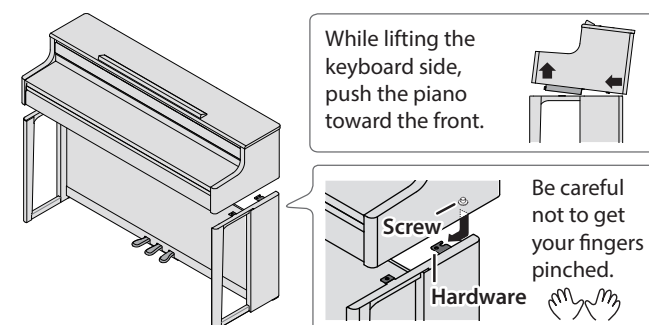


2. Use screws **B** (one each at left and right) to fasten the piano and the stand.

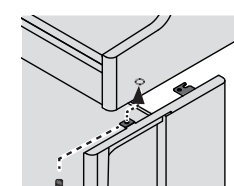


3. Connect the included AC adaptor and power cord.



4. Connect the AC adaptor to the DC In jack, and connect the pedal cord to the Pedal jack.

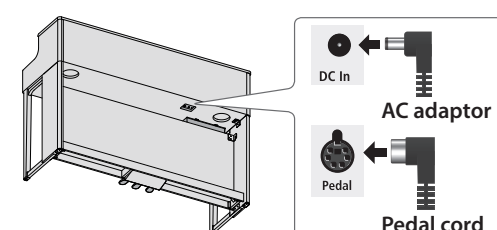


5. Using the cable fasteners located on the bottom surface of the unit, fasten the pedal cord and the AC adaptor cord.

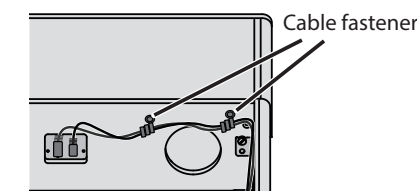

6. Plug the power cord into an AC outlet.


* If you plug in the AC adaptor with the keyboard cover open, the power turns on automatically, but this is not a malfunction.

7. Use two screws **C** to fasten the headphone hook **D**.

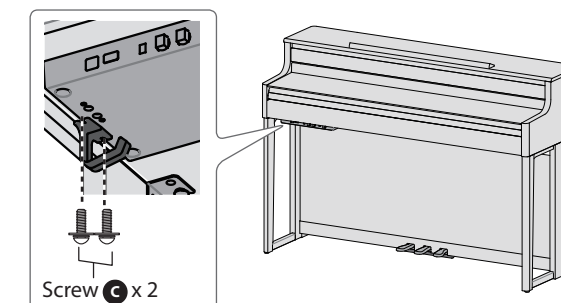

8. Adjust the adjuster located under the pedals.

Rotate the adjuster located under the pedals to lower it until it contacts the floor. If you've placed the piano on carpet, lower the adjuster so that it presses somewhat strongly against the floor.

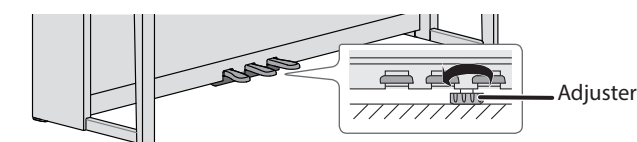


* Since the pedal board is supported by the adjuster, the pedals might be damaged if there is a gap between them and the floor.

HP702 only

9. Slightly loosen (2 or 3 mm) the screws that fasten the music rest, and insert the hardware of music rest into the gaps between the screws and the piano unit.

10. While using one hand to support the music rest, turn the screws to fasten the music rest.

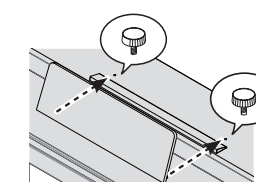

* Take care not to pinch your hand.

* Do not apply excessive force to the music rest.

When moving or transporting

- When moving or transporting the unit, first close the keyboard cover. Fold down the music rest (HP704 only). Next, disconnect the AC adaptor, and rotate the adjuster located below the pedals to raise it.
- With the help of at least one other person, lift the unit horizontally and carry it with care to avoid pinching your hands or dropping the unit on your feet.
- When you have decided on the new location for the unit, rotate the adjuster so that it contacts the floor.

