


## 9.2 EXTERIOR SECTION

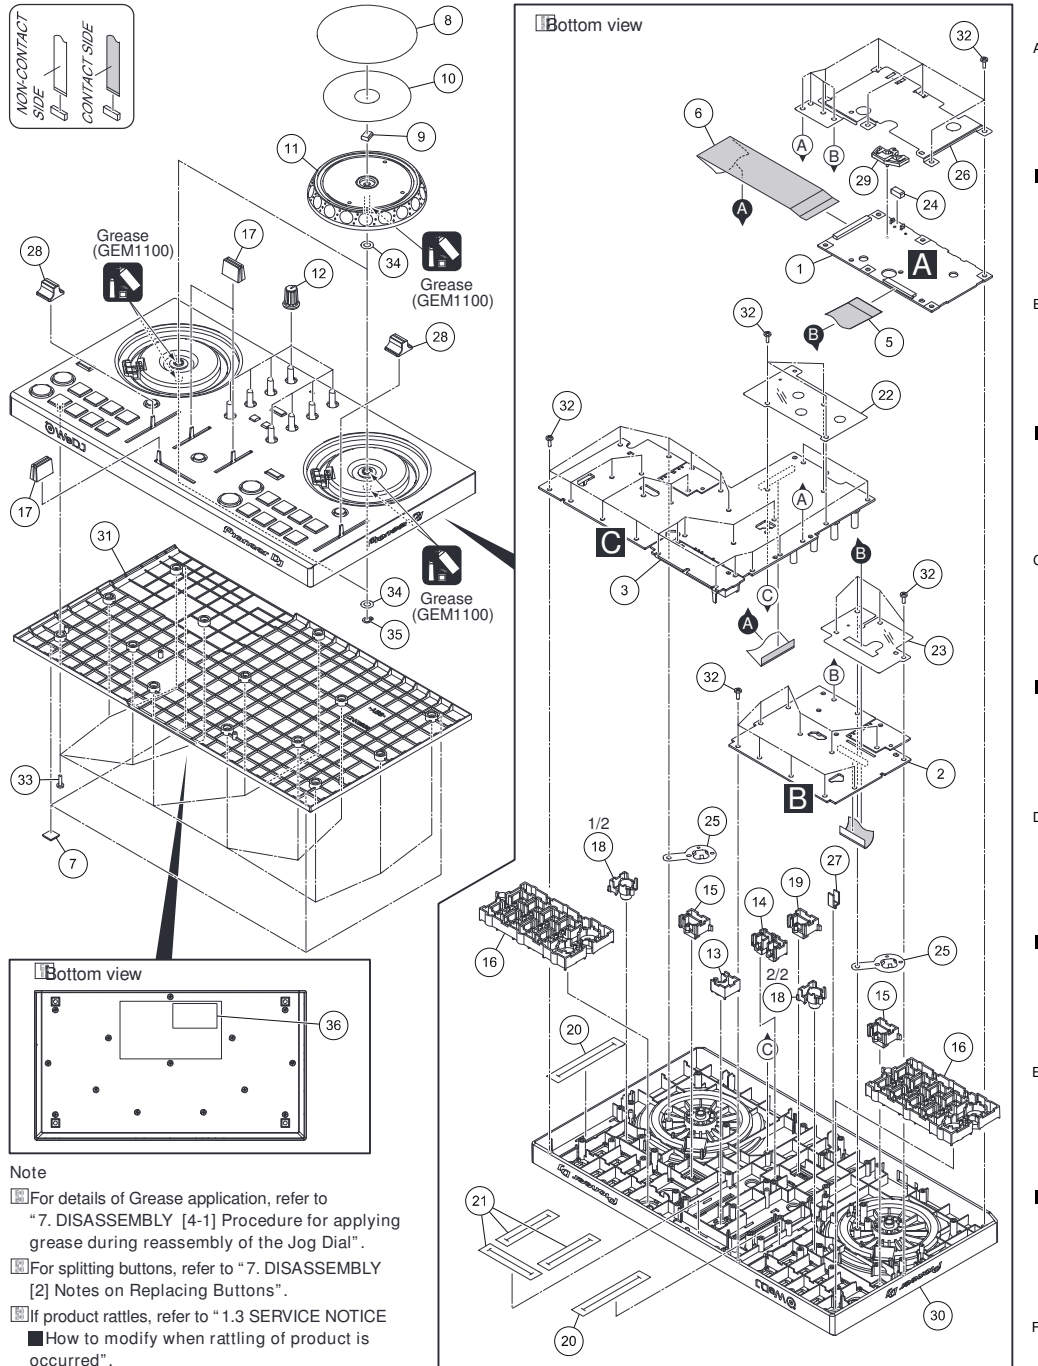

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 MAIN ASSY	DWX4218	21	Sheet	DEC3795
	2 PNL1 ASSY	DWX4219	22	Sheet	DEC3822
	3 PNL2 ASSY	DWX4220	23	Sheet	DEC3823
	4 [REDACTED]		24	Gasket	DEC3824
	5 FFC	DDD1909	25	Plate	DNH3401
	6 FFC	DDD1910	26	Shield Case	DNH3402
	7 Rubber Foot	VEB1349	27	Lens	DNK5862
	8 Plate	DAH3244	28	Knob/TEMPO	DNK6839
	9 Gasket/JOG	DEC3539	29	Cover	DNK6840
	10 DS Tape	DEH1097	30	Control Panel	DNK6837
B	11 Jog Dial	DNK6841	31	Chassis	DNK6838
	12 Knob/PLS	DAA1324	32	Screw	BPZ30P080FNI
	13 Button/MIX	DAC2951	33	Screw	BPZ30P100FTB
	14 Button/FX	DAC2796	34	Washer	WA62D095D050
	15 Button/SHIFT	DAC3206	35	Washer	YC60FAC
	16 Button/PAD	DAC3439	NSP 36	Name Label	See Contrast table (2)
	17 Knob	DAC3440			
	18 Button/BEAT SYNC	DAC3441			
	19 Button/MASTER	DAC3442			
C	20 Packing/TMP	DEC3392			

(2) CONTRAST TABLE

SYXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	SYXJ	XJCN
NSP	36	Name Label	Not used	DRW2792