

# 9.7 JOG DIAL SECTION

1

 
2

3


4

A • Bottom view



Refer to "7. DISASSEMBLY"



• Top view

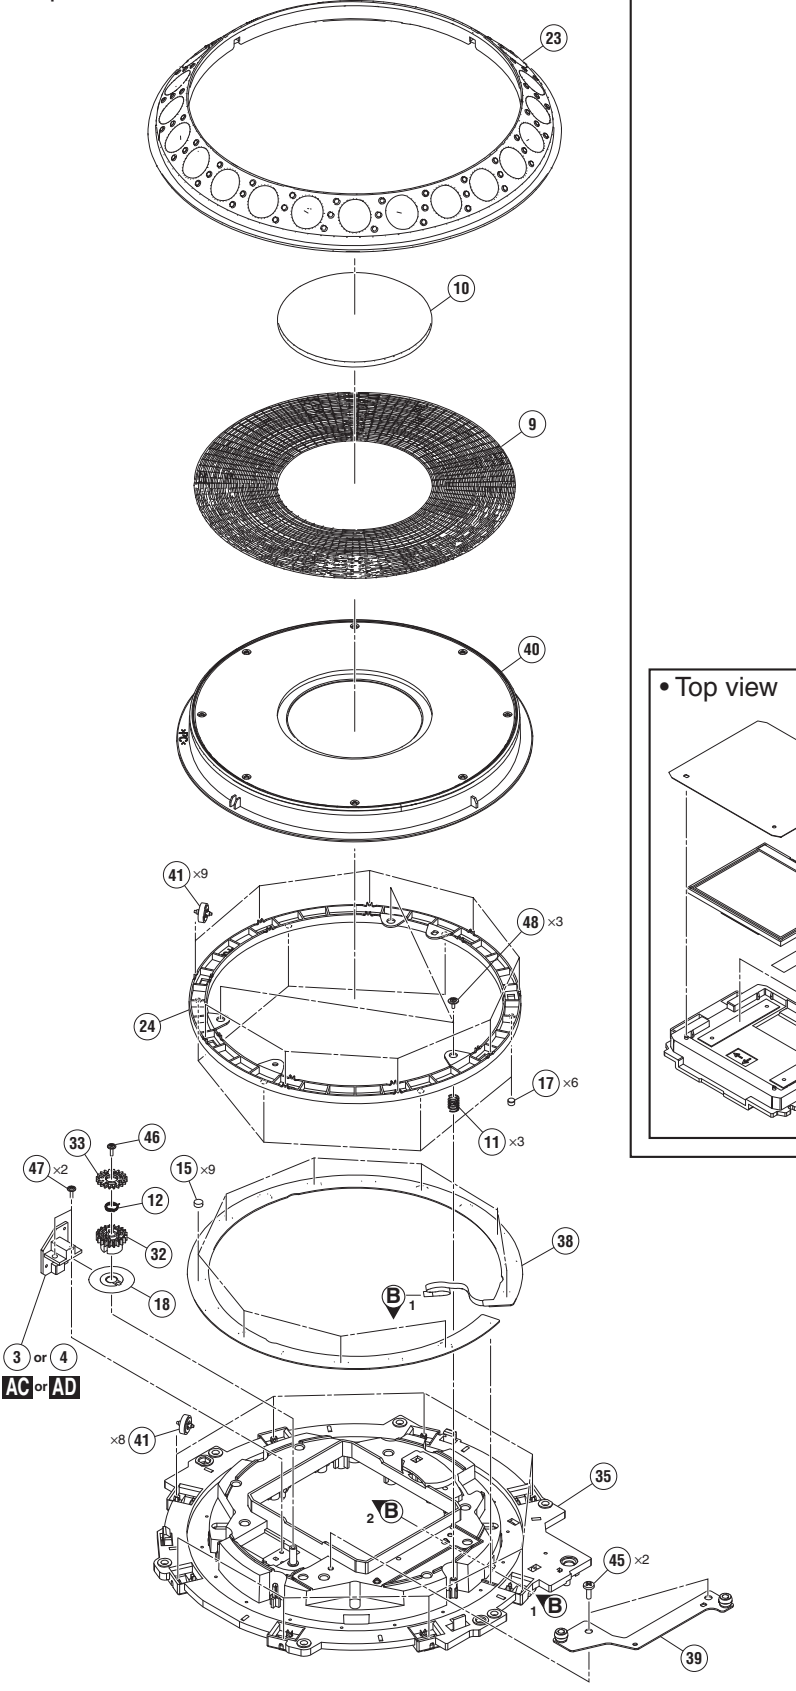

• Top view

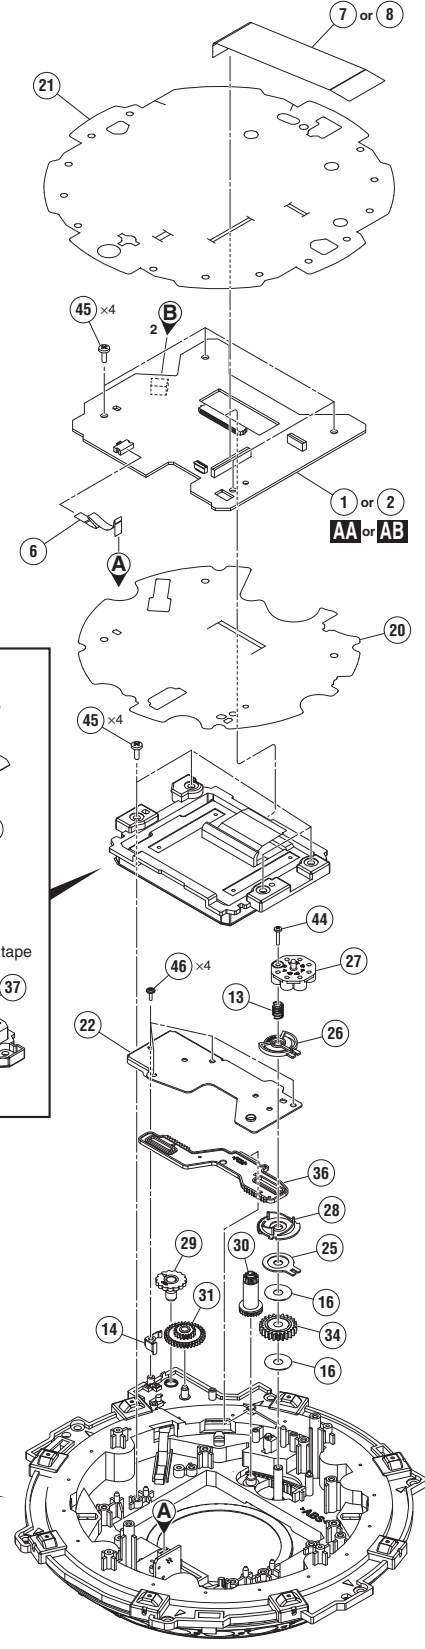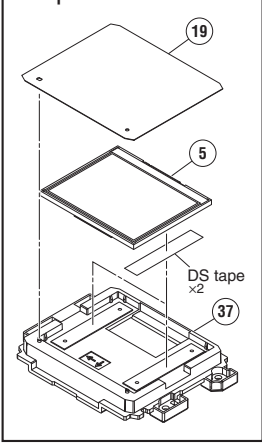

1

2

3

4

## JOG DIAL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	JLCD1 Assy	DWX4288	
2	JLCD2 Assy	DWX4289	A
3	JOG1 Assy	DWX4317	
4	JOG2 Assy	DWX4318	
5	TFT LCD	DWX4228	
6	FFC	DDD1843	
7	FFC (for Left Deck)	DDD1937	
8	FFC (for Right Deck)	DDD1938	
9	JOG Plate	DAH2679	
10	Window	DAH3189	
11	SW Spring	DBH1681	B
12	Encoder Spring	DBH1710	
13	Coil Spring/LD	DBH1798	
14	Leaf Spring/ADJ	DBK1376	
15	SW Cushion HH48/2	DEC2538	
16	Washer	DEC3137	
17	Cushion/RNG	DEC3466	
18	Plate	DEC3700	
19	Sheet	DEC3844	
20	Barrier	DEC3845	C
21	Barrier	DEC3846	
22	Plate	DNH3345	
23	JOG B	DNK4068	
24	SW Ring	DNK5233	
25	Smoother	DNK5237	
26	Comp Plate	DNK5243	
27	Adjust Plate	DNK5300	
28	Cam Plate	DNK5301	
29	Dial Gear	DNK5302	
30	Link Gear A	DNK5303	D
31	Link Gear B	DNK5304	
32	Gear/A	DNK6143	
33	Gear/B	DNK6144	
34	Gear/LD	DNK6145	
35	Holder	DNK6745	
36	Plate	DNK6748	
37	Holder	DNK6866	
38	Sheet SW	DSX1078	E
39	Stay Assy/JOG	DXB2133	
40	JOG Dial A Assy	DXA2159	
41	Roller	DXB2178	
42	•••••		
43	•••••		
44	Screw	BPZ20P100FTC	
45	Screw	BPZ30P080FNI	
46	Screw	IPZ20P060FTC	
47	Screw	IPZ20P080FTC	F
48	Screw (FE)	DBA1265	